

 
# 封底

## Back Cover



# 封面

## Front Cover

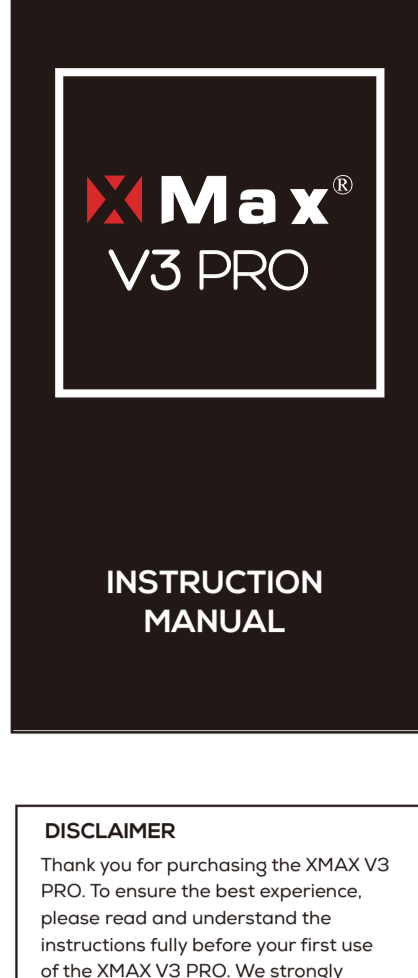

### SHARE THE VIEW:

Take a video using the product with #XMAXVAPORIZER and we will share it with our global family.

**BATTERY HEALTH NOTE**  
PLEASE DO NOT PUT THIS PRODUCT AWAY OR LEAVE IT FOR EXTENDED PERIODS OF TIME WITH A LOW CHARGE. IF THE BATTERY FALLS BELOW 2% AND IS LEFT THAT WAY THEN IT WILL NO LONGER ACCEPT A CHARGE.

### DISCLAIMER

Thank you for purchasing the XMAX V3 PRO. To ensure the best experience, please read and understand the instructions fully before your first use of the XMAX V3 PRO. We strongly recommend you keep these instructions for future reference.

California Prop 65 WARNING: This product contains chemicals known by the state of California to cause cancer

 
birth defects or other reproductive toxicity. The vaporized aerosol of chemicals are known to cause respiratory or other diseases and in some cases are irreversible. If needed contact your local poison control center. USA: AAPCC 1-800-222-1222.

Note that the XMAX V3 PRO is not a medical device and is not intended to administer medicinal or illegal substances of any kind, diagnose, cure, treat or prevent any diseases or other conditions.

Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under the law of their (and/or other) jurisdictions.

THIS PRODUCT DOES NOT CONTAIN ANY BOTANICAL MATERIAL.


### XMAX V3 PRO OVERVIEW

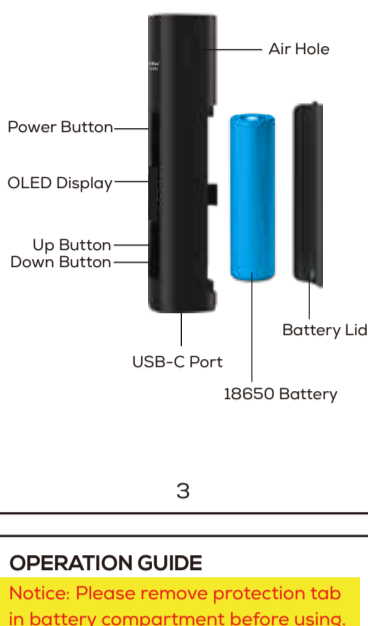

### OPERATION GUIDE

Notice: Please remove protection tab in battery compartment before using.
 
#### 1. CHARGE




Fully charge device before first use. Please use the provided USB-C cable to charge your device.

#### 2. LOAD

 How to use the oven: Remove the magnetic cap tip and choose which botanical substance is best for you. Due to the oven's delicate technology, please be gentle when packing the oven and/or inserting the oven cup and / or cleaning.

### XMAX V3 PRO CONTENTS

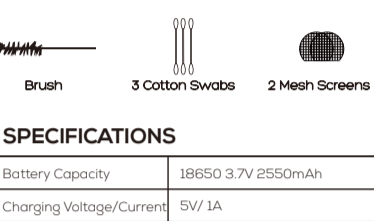

### SPECIFICATIONS

Battery Capacity	18650 3.7V 2550mAh
Charging Voltage/Current	5V/1A
Working Voltage	3.2-4.2V
On/Off	Click the button 3 times consecutively
Temperature Range	100°C-220°C (212°F-428°F)
Oven Material	Metal
Display Screen	OLED
Session Time	4 minutes/6 minutes
On-demand Single Holding Time	30s
Size	26.6* 23.8*15.0, 2mm (1.05* 0.94* 5.91inch)



**Aromatherapy Materials:** Loosely pack the ground substance in the oven chamber, do not let the substance beyond the top of the oven chamber.

**Botanical Concentrate:** Insert the concentrate/wax cup into the oven chamber, use the dab/scraping tool to load the desire substance into the cup.

**3. POWER ON/OFF**  
Click power button 3 times, the XMAX V3 PRO will be powered on and begin to

heat up under the default settings or your last temperature setting.

Under "ON DEMAND" mode, the device will automatically become "STANDBY" Mode if not being used within 30 seconds. Then it will automatically power off if not being used within the next 120 seconds.

#### 4. ENJOY XMAX V3 PRO

Two Modes available While heating, the OLED display temperature will go up, " " will flash as well.

SESSION Mode: The device vibration indicates readiness and the timer countdown starts. Inhale through the cap, this device will automatically begin vaping.

ON DEMAND Mode: Keep pressing the "power button" to heat up, the device will vibrate when reach the setting temperature and ready for inhale. The device will vibrate 3 times and auto suspend heating after 30s, please keep pressing the "power button" again to increase the use for an additional 30 seconds.

#### 5. TEMPERATURE SETTINGS

Press or hold the "up button" to increase temperature, press or hold the "down button" to decrease temperature.

Click to change by degree, hold to change quickly.  
Temperature Range: 100°C-220°C (212°F-428°F)

Two Modes available While heating, the OLED display temperature will go up, " " will flash as well.

SESSION Mode: The device vibration indicates readiness and the timer countdown starts. Inhale through the cap, this device will automatically begin vaping.

#### 8. MODE SWITCHOVER

To switchover to "ON DEMAND" mode, click the "up button" and "down button" simultaneously once.

The device will automatically power off if not being used within 120 seconds. Click the "up button" and "down button" simultaneously once, then switchover to "SESSION" mode.

#### 9. OLED DISPLAY

The OLED display shows Battery level, Session, Target temperature, Heating Current temperature, and ON DEMAND, Target temperature, Heating Current temperature.

#### 10. CLEANING & MAINTENANCE

To keep the XMAX V3 PRO working optimally and maintaining the purest taste, we recommend that all parts which come in contact with material or vapor be cleaned regularly.

All removable parts can be disassembled for optimal cleaning.

Cap & filter Gently pull the cap to remove it. It can be cleaned with soap and water.

For deep cleaning, immerse all pieces except plastic cap in isopropyl alcohol for 10-20 minutes, rinse thoroughly with clean water and dry before reassembling.

1. Metal oven cleaning: use brush to sweep inside and cotton swab dipped in isopropyl alcohol.

\* Tip: Perform a burnoff cycle at max temp for 2 minutes after cleaning.

2. Replace the oven mesh screen:

(1) Please use the cleaning tool slowly remove the mesh screen along the wall of the oven.

(2) Put the mesh screen into the oven, then use the cleaning tool to press the screen in the specified position.

After using the XMAX V3 PRO or charging, please allow the device to cool down before storage. It should be stored in a clean, dry place protected against the effects of weather and out of the reach of children and pets. If you have any concerns or if there is any problem, please switch off the XMAX V3 PRO and/or remove it from the charger immediately. Do not try to remedy any defect yourself. Contact our customer service directly at support@topgreen-cig.com.

**NOTE:**  
DO NOT TOUCH THE HEATING ELEMENT IMMEDIATELY AFTER USE.  
DO NOT CLEAN THE WHOLE DEVICE WITH WATER OR SUBMERGE.  
DO NOT INJECT ANY LIQUID OR OIL INTO THE METAL OVEN.  
MAKE SURE TO DEACTIVATE THE DEVICE BY LOCKING. MAKE SURE IT HAS NOT BEEN USED FOR AT LEAST 30 MINUTES AND IS COMPLETELY COOLED OFF.  
WARNING:  
HOT COMPONENTS

### SAFETY

For your first use, please read and fully understand the instructions including the safety information. We recommend that these instructions be kept for future reference. Failure to follow warnings may result in a safety hazard including electric shock, fire, property damage, bodily injury or death.

**AGE**  
You must be of legal age in your jurisdiction to purchase or use the XMAX V3 PRO. For adult use only.

**USE**  
Never use the product before reviewing the manual in its entirety. If any section or topic is unclear prior to use, please contact customer service for clarification.

This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first

consulting a doctor. It is recommended that all users consult a doctor prior to use with your chosen herb or concentrate. Note that the XMAX V3 PRO is not a medical device and is not intended to diagnose, cure, treat, or prevent any diseases or other medical conditions. XMAX V3 PRO is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the laws of your local jurisdiction.

**DAMAGE**  
Immediately discontinue use of the product if the vaporizer unit is damaged in any way including but not limited to: dents, overheating, unusually restrictive airflow, and/or electrical malfunctions. Do not attempt to repair product by disassembly of non-replaceable parts except Cap, Filter, Packing Tool, and Removable Battery. Please contact customer service for help with any damaged unit.

All batteries may explode or burst into flame if used improperly or mistreated. Do not disassemble, puncture, tamper, cut, crush, short-circuit, incinerate or expose to water, fire or high temperature above 60°C or 140°F. It is your responsibility to understand the dangers as well as the proper procedures for handling all batteries. Do not dispose of in trash containers nor litter the environment.

Please recycle or dispose according to local safety regulations law. (Suggested to cover terminals with proper insulating tape before disposal.)

**WARNING** THIS PRODUCT IS NOT INTENDED FOR NICOTINE. PRODUCT IS DESIGNED FOR LEGAL BOTANICALS AND CONCENTRATE USE ONLY. PRODUCT DOES NOT CONTAIN ANY BOTANICALS OR CONCENTRATE MATERIALS. KEEP DEVICE AWAY FROM CHILDREN AND PETS.

**LIMITED WARRANTY**  
The product is warranted for a period of 12 months from purchase with receipt, or 12 months from date of manufacture without receipt against defects in manufacturing, workmanship, and materials. This device is designed for the use of legal herb and concentrates only. Any use of the XMAX V3 PRO with illegal substances will void the warranty.

This warranty covers only the electronic base. This warranty does not warrant cap, battery cell, scraping tool and/or other detachable parts. The warranty does not apply to damage caused by accident, abuse, misuse, natural disaster, user error, or use outside the intended use described in the manual. Use outside the intended use as described in this manual also includes any tampering with device in any way, including but not limited to modification to alter functionality, or modification to alter appearance.

The warranty also does not apply to

cosmetic damage including but not limited to dents, scratches/chips to finish, and/or broken plastic parts.

Normal product wear and tear is not covered under warranty. Normal performance degradation of batteries is also not covered by the warranty.

To make a warranty claim, please contact customer support at support@topgreencig.com. The original bill of sale, authenticity code, pictures or videos, and any serial numbers are required to redeem the warranty.

At the manufacturer's discretion, warranty service will be provided by repair of the product and/or part with a new or functionally equivalent product/part.

**CUSTOMER SUPPORT**  
For any question or concerns with the product, its use or defects, please contact customer support at support@topgreencig.com. We will do our best to provide a response within two (2) business days after receipt of written notice.



www.topgreen-tech.com  
© Topgreen Technology 2023  
All rights reserved

